



drumKAT

3.5


SCREENS

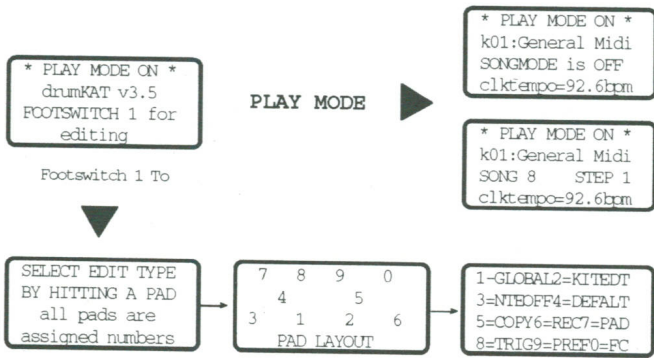


GLOBAL SCREENS

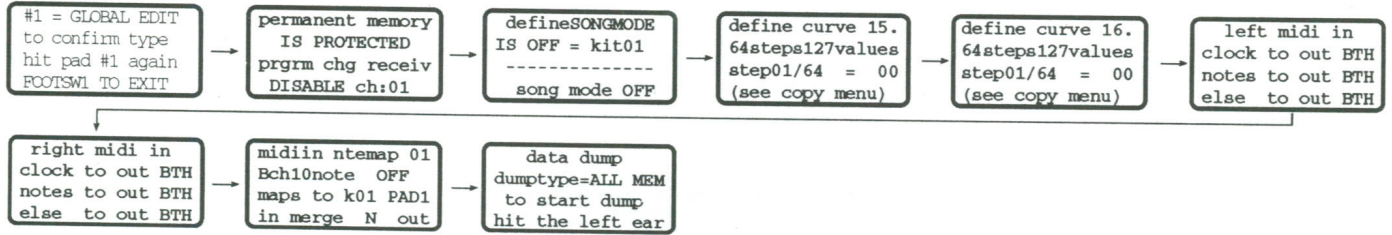


KIT EDIT SCREENS

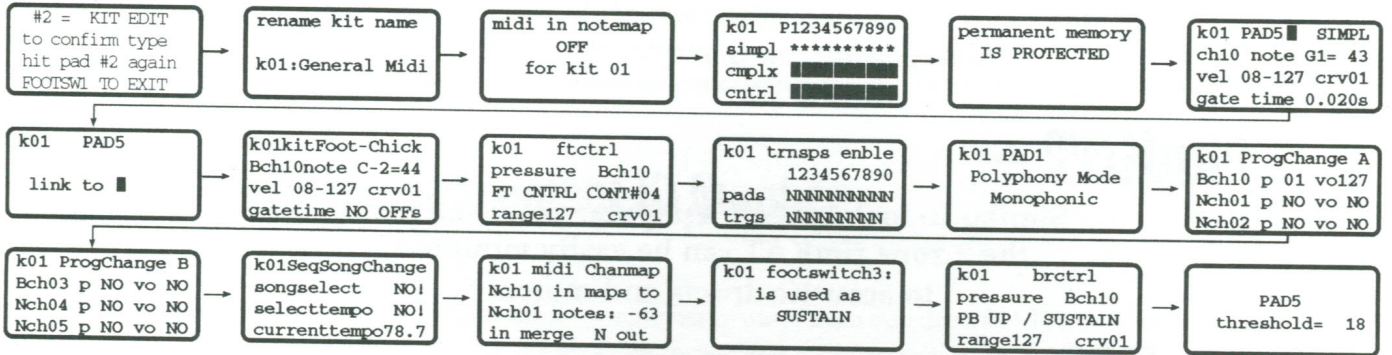


ALL NOTES OFF SCREENS

 


DEFAULT SCREENS

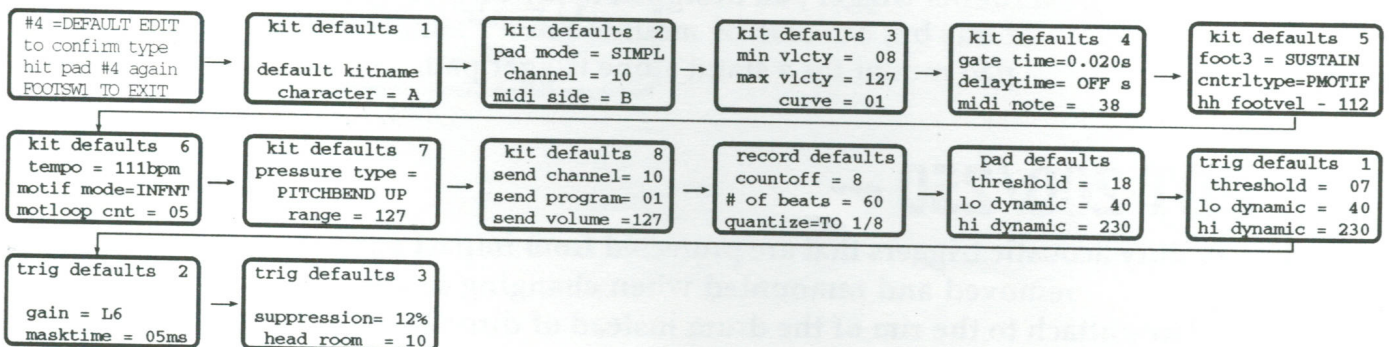


COPY SCREENS

 


MOTIF SCREENS

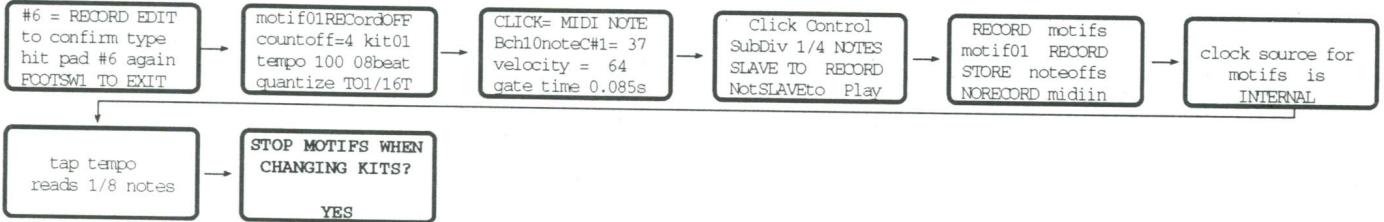


PAD ADJUST SCREENS

 


TRIGGER ADJUST SCREENS

 

PREFERENCE SCREENS

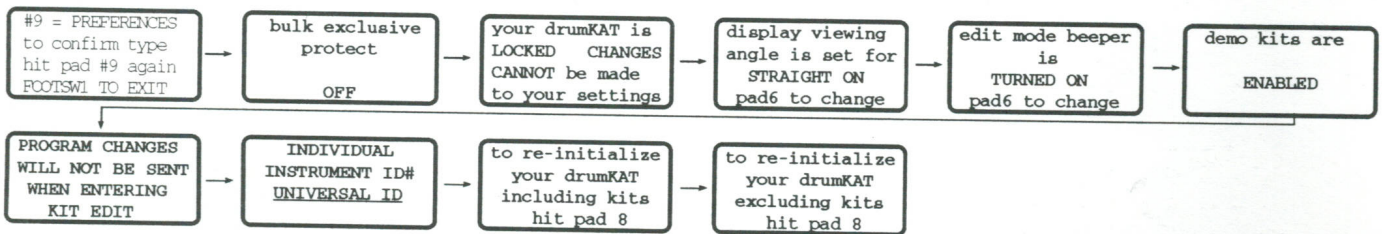


FT/BRTH SCREENS

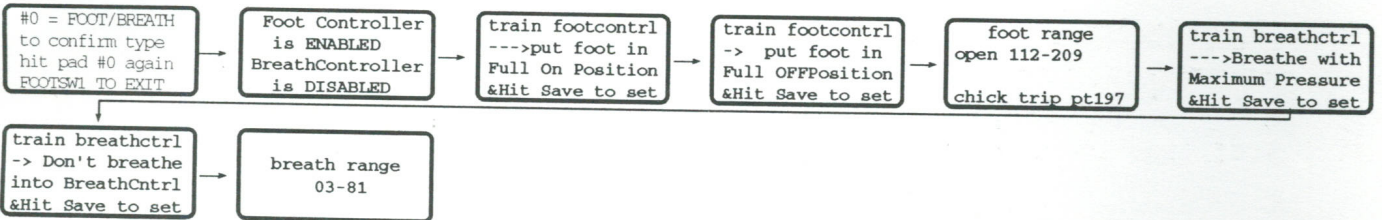


MISCELLANEOUS SCREENS

 RECALL SCREENS



DUPLICATE SCREENS

 

SAVE SCREENS

